CONNECTING THE BATTERY TO THE INVERTER

# Battery EASUN POWER 25.6V 100Ah

EASUN POWER 25.6V 100Ah 2560Wh · LiFePO4 without a communication port (USE setting) · connection to our 24V inverters




## What we connect

- **Battery EASUN POWER 25.6V 100Ah 2560Wh**

## What else you will need

- Battery–inverter power cables 35–50 mm² (see table), M8 lugs
- DC breaker / fuse 200–250 A (see table)
- 32 A breaker on the grid input, cable 3×4 mm²
- Screwdriver, 13 mm wrench, multimeter

## Wiring diagram

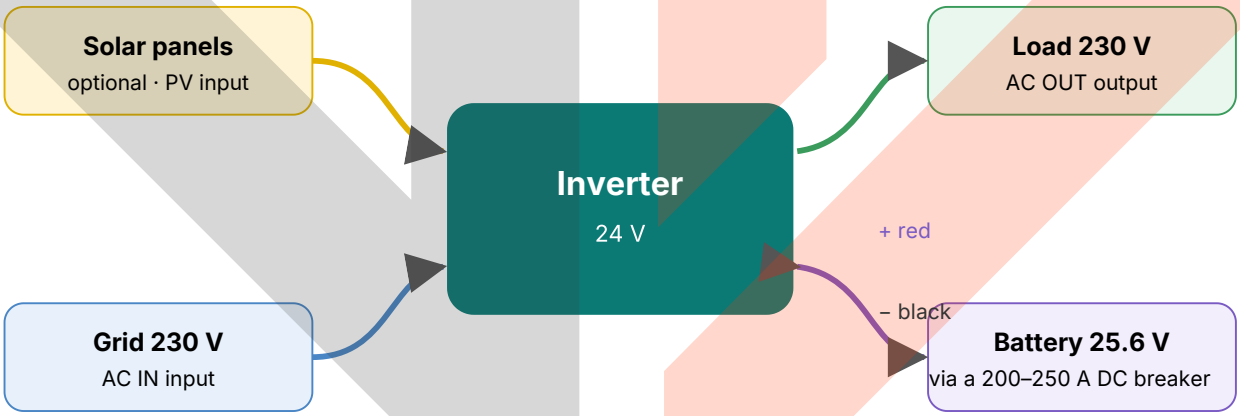


minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com

## Compatible inverters

| Inverter | Power | DC breaker · cable | In this inverter's menu | Charging current |
|---|---|---|---|---|
| **JSDsolar J4000E 4kW 24V** | 4.0 kW | 200 A<br>35 mm² | 17 = FEL, 38 = OFF · voltages 20, 21, 19 | 50 A* |
| **EASUN SMT-4KW 24V** | 4.0 kW | 200 A<br>35 mm² | 05 = USE · voltages 26, 27, 29 | 50 A* |
| **POWGROW 3.6kW 24V** | 3.6 kW | 200 A<br>35 mm² | 17 = CUS · voltages 20, 21, 19 | 50 A* |
| **DATOU BOSS 3.3kW 24V** | 3.3 kW | 200 A<br>35 mm² | A17 = Pb · voltages A1–A7 according to the inverter manual | 50 A* |
| **ANENJI ANJ-4000W 4.2kW 24V** | 4.2 kW | 200 A<br>35 mm² | 05 = USE · voltages 26, 27, 29 | 50 A* |
| **POWGROW SMS-5kW 24V** | 5.0 kW | 250 A<br>50 mm² | 17 = FEL, 44 = OFF · voltages 20, 21, 19 | 50 A* |
| **Aninerel ANL-4200T 4.2kW 24V** | 4.2 kW | 200 A<br>35 mm² | 05 = USE · voltages 26, 27, cut-off 31 | 50 A* |
| **POWLAND SMS-5kW 24V WiFi** | 5.0 kW | 250 A<br>50 mm² | 17 = FEL, 44 = OFF · voltages 20, 21, 19 | 50 A* |
| **ECGSOLAX HVM 3.6kW 24V** | 3.6 kW | 200 A<br>35 mm² | 17 = FEL, 38 = OFF · voltages 20, 21, 19 | 50 A* |

* If the inverter does not allow you to set this much, set its maximum. Menu item numbers differ between inverters: the column "In this inverter's menu" follows the manual of this particular inverter; voltage and current values are in the table below. The battery also suits other 24 V hybrid inverters with the USE setting (user-defined battery type).

## Key values for this battery

**28.4 V**
charge voltage (26)

**27.2 V**
float voltage (27)

**24.0 V**
cut-off (29)

**USE**
battery type (05)

**50 A**
max. charge current (02)

**30 A**
grid charging (11)

## Connection procedure

1. Mount the inverter vertically on a non-combustible wall in a dry place. Leave at least 20 cm of free space above and below for cooling.
2. Make sure everything is switched off: inverter button OFF, battery switch/button OFF, DC breaker off, 230 V grid not connected.

minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com

3. Install a DC breaker or fuse rated **200–250 A (see table)** in the positive (red) wire between the battery and the inverter.
4. Connect the power cables (cross-section at least **35–50 mm² (see table),** M8 lugs): **red** from the battery "+" to the inverter "+ BAT", **black** from the battery "−" to "− BAT". Check the polarity twice: swapping "+" and "−" is guaranteed to damage the inverter.
5. Tighten the terminal bolts firmly (without stripping the thread) and fit the protective caps. A loose contact heats up and melts the terminals.
6. Switch on the battery (button or switch on the case, if any), then the DC breaker.
7. Switch on the inverter with the ON button. The battery voltage should appear on the display. Enter the settings from the table below.
8. Switch off the inverter and connect the 230 V grid to the **AC IN** terminals (L, N, PE) through a separate 32 A breaker.
9. Connect the load (your socket/distribution board) to the **AC OUT** terminals (L, N, PE). Never mix up AC IN and AC OUT: feeding grid power into the output damages the inverter.
10. If you have solar panels, connect them to the **PV** input last, observing polarity. The open-circuit voltage of the panels (Voc) rises in frosty weather: do not exceed the PV maximum on the inverter label.
11. Switch on the inverter and check: 230 V at the output, the battery charges from the grid (charging icon on the display), the lights stay on when the grid is off.

**Important about power from the battery.** The battery BMS is usually rated for 100 A of continuous current (the exact value is on the battery label). That is ≈ **2.3 kW** of continuous load from the battery. The inverter delivers full power when there is grid or solar power. If the battery "trips" during a power cut, reduce the number of powerful appliances switched on at the same time.

## Inverter settings

Entering the menu: hold the **ENTER** (or **SET**) button for 3 seconds. Use ▲/▼ to select the program number, press ENTER, change the value, press ENTER to save. Exit: **ESC**.

| № | Parameter | Value | Why |
|---|---|---|---|
| 01 | Output source priority | **UTI** (no panels) or **SBU** (with panels) | UTI: we run from the grid and keep the battery full in case of a power cut. SBU: solar first, then battery, then grid. |
| 02 | Maximum charging current (total) | **50 A** | Safe for LiFePO4 100Ah (≈0.5C). Do not set higher: it shortens the battery's life. |
| 03 | AC input voltage range | **UPS** (from the grid) / **APL** (from a generator) | UPS: fast switchover, computers do not restart. APL: if you run on a generator. |
| 05 | Battery type | **USE** (user-defined) | The battery has no communication with the inverter: the charge and cut-off voltages are set manually below. Do not select AGM/FLD: those are for lead-acid batteries. |

minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com

| | | | |
|---|---|---|---|
| 06 | Auto restart after overload | **LTE** (enabled) | The inverter resumes operation by itself. |
| 07 | Auto restart after overheating | **TTE** (enabled) | The inverter resumes operation by itself. |
| 09 | Output frequency | **50 Hz** | Standard for Ukraine and Europe. |
| 11 | Maximum grid charging current | **30 A** | Moderate grid charging so as not to overload the wiring and the battery. |
| 12 | Back-to-grid voltage (SBU mode) | **25.0 V** | When the battery discharges to this voltage, the load switches to the grid (if available). |
| 13 | Back-to-battery voltage (SBU mode) | **27.0 V** | After recharging to this voltage, the inverter runs from the battery again. |
| 16 | Charging source priority | **SNU** (solar + grid) | The battery charges from both solar and grid. Without panels, it charges from the grid. |
| 26 | Charge voltage (Bulk / CV) | **28.4 V** | Standard for LiFePO4 8S (25.6 V). |
| 27 | Float voltage | **27.2 V** | The battery is not overcharged when it stays on the grid for a long time. |
| 29 | Cut-off voltage (Low DC cut-off) | **24.0 V** | The inverter switches off its output so as not to drain the battery to zero and trip the BMS. |

The program numbers are given for inverters of this class (the standard hybrid inverter menu). If the number on your screen differs, go by the parameter name and value. After entering the settings, switch the inverter off and on again.

## Which mode to choose

- **Backup during power cuts only (no panels):** 01 = UTI, 16 = SNU. The inverter runs from the grid and the battery is always full; when the power goes out it switches to the battery automatically.
- **You have solar panels and want to save:** 01 = SBU, 16 = SNU (or CSO). Solar power by day, battery at night, the grid only when the battery has dropped to 25.0 V.
- **Running on a generator:** 03 = APL, 11 = 30 A or less, so as not to overload the generator.

minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com

## How long it runs on battery

| Load | Example | Runtime |
|---|---|---|
| 100 W | router, lights, chargers | **≈ 20.7 h** |
| 200 W | fridge + lights | **≈ 10.4 h** |
| 300 W | fridge + lights + TV | **≈ 6.9 h** |
| 500 W | fridge, laptop, pump | **≈ 4.1 h** |
| 1000 W | boiler, kettle briefly, several appliances | **≈ 2.1 h** |
| 2000 W | air conditioner, water heater, electric stove | **≈ 1.0 h** |

Approximate: 90% of battery capacity and inverter efficiency ≈90%. A fridge runs in cycles, so the real runtime is longer.

## Check after start-up

- Battery voltage on the display: ≈ 27.2–28.4 V when full, ≈ 25.0 V when discharged.
- Switch off the grid breaker: the load must keep running without interruption.
- After 10–15 min of operation, touch the terminals and cables: they must not be hot. If they heat up, a connection is loose or the cable is too thin.
- A battery below 23.2 V may have gone into BMS protection: charge it from the grid through the inverter.

**Safety.** Make all connections only with the battery, inverter and grid switched off. Do not short-circuit the battery terminals: the short-circuit current of LiFePO4 is very high. Do not install the inverter in a bathroom, outdoors in the rain or near flammable materials. If in doubt, contact an electrician.

## Shutdown and maintenance

- Switch off in reverse order: load → grid → panels → inverter → DC breaker → battery.
- Every 3 months, check that the terminals are tight and the ventilation openings are clean.
- If you do not use the kit for a long time, charge the battery to 50–70% and switch it off.

minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com