CONNECTION AND SETUP GUIDE

# Kit POWGROW 3.6kW 24V + GSIKE 25.6V 100Ah 2560Wh

Inverter POWGROW 3.6kW 24V + battery GSIKE 25.6V 100Ah 2560Wh




## Kit contents

- **Inverter POWGROW 3.6kW 24V**
- **Battery GSIKE 25.6V 100Ah 2560Wh**

## What else you will need

- Battery–inverter power cables 35 mm², M8 lugs
- DC breaker / fuse 200 A
- 25 A breaker on the grid input
- Screwdriver, 13 mm wrench, multimeter

## Wiring diagram

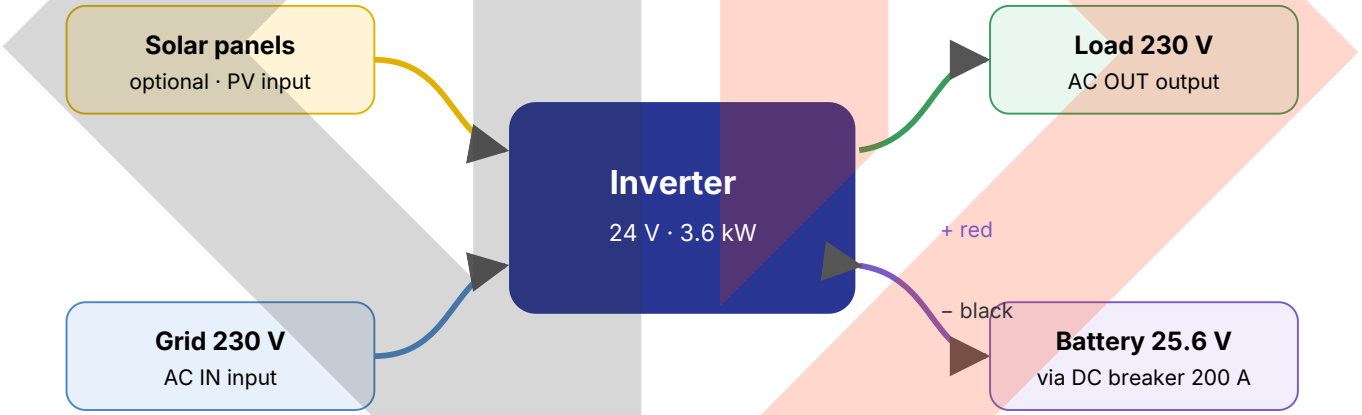


minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com

## Inverter connectors: bottom panel

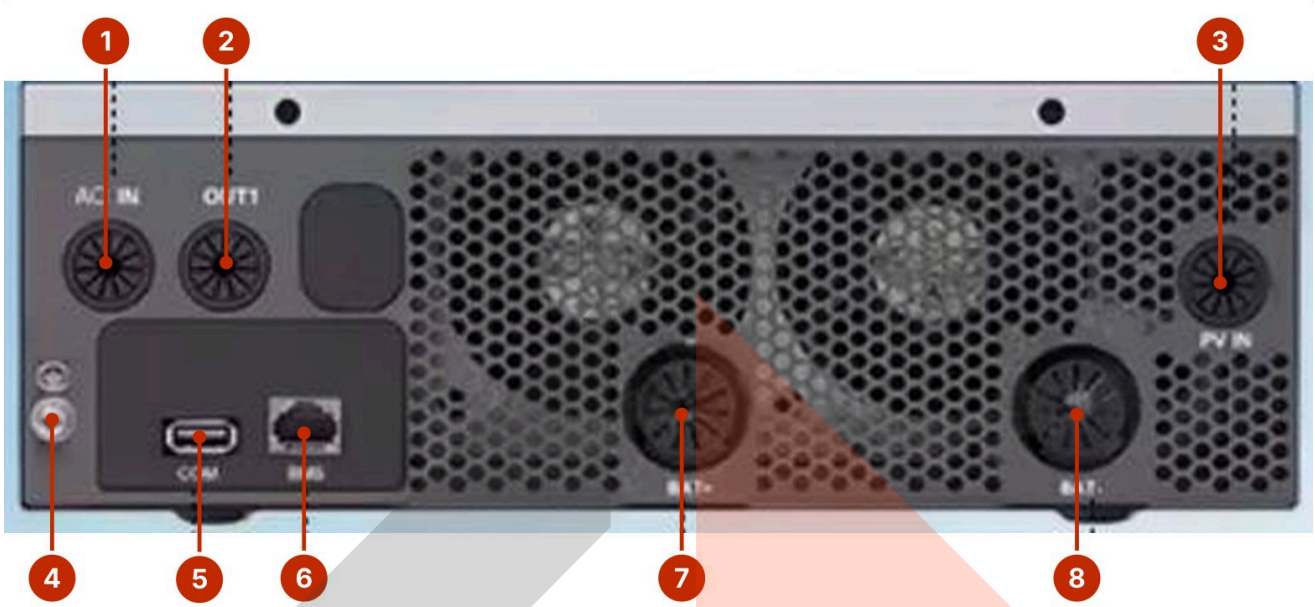


| № | Connector | What it is | What connects where |
|---|---|---|---|
| 1 | **AC IN** | Grid or generator input (L, N; the PE of this cable goes to earth). | Cable from the grid through a separate 25 A breaker. A generator also connects here, item 04 = GEN. |
| 2 | **OUT1 (AC OUT)** | AC output 230 V. This model has only one output. | Cable to the load panel (PE, L, N). |
| 3 | **PV IN** | Solar panel cable entry to the PV+ and PV– terminals. | Panels via a 25 A DC breaker rated for more than 500 V. |
| 4 | **⏚ PE** | External case earthing point. | Yellow-green wire with an OT lug, M4 screw. The manufacturer recommends using the PE of the AC IN cable as the earth wire. |
| 5 | **COM** | Port for the Wi-Fi module (USB connector). In the manufacturer's manual this port is labelled WiFi. | The Wi-Fi module (dongle) plugs in here directly. |
| 6 | **BMS** | RJ45 port for communication with the lithium battery BMS, RS485 or CAN. | Communication cable from the battery BMS. Protocol: item 38. Inverter port pinout: 1 = RS485B, 2 = RS485A, 4 = CANH, 5 = CANL; straight-through cable. |
| 7 | **BAT+** | Battery "plus" cable entry. | Battery plus via a 175 A fuse / isolator, 35 mm² cable. |
| 8 | **BAT–** | Battery "minus" cable entry. | Battery negative, 35 mm² cable. |

The dark rectangular blanking plug between OUT1 and the grille is not described in the manufacturer's manual; the AC IN, AC OUT, PV+/PV–, BAT+/BAT– terminals are under the bottom cover.

minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com

## Key values for this kit

| | | |
|---|---|---|
| **28.4 V**<br>charge voltage (20) | **27.2 V**<br>float voltage (21) | **24.0 V**<br>cut-off (19) |
| **FEL**<br>battery type (17) | **50 A**<br>max. charge current (07) | **30 A**<br>grid charging (06) |

## Connection procedure

1. Mount the inverter vertically on a non-combustible wall in a dry place. Leave at least 20 cm of free space above and below for cooling.
2. Make sure everything is switched off: inverter button OFF, battery switch/button OFF, DC breaker off, 230 V grid not connected.
3. Install a **200 A** DC breaker or fuse between the battery and the inverter in the positive (red) wire.
4. Connect the power cables (cross-section at least **35 mm²**, M8 lugs): **red** from the battery “+” to the inverter “+ BAT”, **black** from the battery “−” to “− BAT”. Check the polarity twice: swapping “+” and “−” is guaranteed to damage the inverter.
5. Tighten the terminal bolts firmly (without stripping the thread) and fit the protective caps. A loose contact heats up and melts the terminals.
6. Switch on the battery (button or switch on the case, if any), then the DC breaker.
7. Switch on the inverter with the ON button. The battery voltage should appear on the display. Enter the settings from the table below.
8. Switch off the inverter and connect the 230 V grid to the **AC IN** terminals (L, N, PE) through a separate 25 A breaker.
9. Connect the load (your socket/distribution board) to the **AC OUT** terminals (L, N, PE). Never mix up AC IN and AC OUT: feeding grid power into the output damages the inverter.
10. If you have solar panels, connect them to the **PV** input last, observing polarity. The open-circuit voltage of the panels (Voc) rises in frosty weather: do not exceed the PV maximum on the inverter label.
11. Switch on the inverter and check: 230 V at the output, the battery charges from the grid (charging icon on the display), the lights stay on when the grid is off.

**Important: power from the battery.** The battery BMS is usually rated for 100 A continuous current (the exact value is on the battery label). That is ≈ **2.3 kW** of continuous load from the battery. The inverter delivers its full 3.6 kW when grid or solar power is available. If the battery “trips” during a power cut, reduce the number of powerful appliances switched on at the same time.

## Inverter settings

Menu access: hold the **ENTER** button for 2 seconds. Use ▲/▼ to select the program number, ENTER, change the value, ENTER to save. Exit: **ESC.**

minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com

| № | Parameter | Value | Why |
|---|---|---|---|
| 01 | Output voltage | **230V** | Standard for Ukraine and Europe. |
| 02 | Output frequency | **50Hz** | Standard for Ukraine and Europe. |
| 03 | Output source priority | **Grd** (no panels) or **PbG** (with panels) | Grd: from the grid, battery kept full in case of a power cut. PbG: solar and battery first, the grid when they are not enough. |
| 04 | Input mode | **UPS** (grid) / **GEN** (generator) | UPS: fast switching for computers. GEN: power from a generator. |
| 05 | Charging source priority | **PnG** (solar + grid) | Charging from both solar and grid. |
| 06 | Grid charging current | **30 A** | Moderate grid charging, without overloading the wiring or the battery. |
| 07 | Maximum charging current (total) | **50 A** | Total solar + grid charging, safe for LiFePO4 100Ah. Do not set higher. |
| 09 | Auto restart after overload | **ON** | The inverter resumes operation by itself. |
| 10 | Auto restart after overheating | **ON** | The inverter resumes operation by itself. |
| 17 | Battery type | **FEL** (LiFePO4) | Lithium iron phosphate. AGM / FLD are for lead-acid only. |
| 38 | BMS communication | **OFF** | No communication cable to the inverter. |
| 20 | Charge voltage (CV) | **28.4 V** | Standard for LiFePO4 8S (25.6 V). |
| 21 | Float voltage | **27.2 V** | The battery is not overcharged when it stays on the grid for a long time. |
| 19 | Cut-off voltage | **24.0 V** | The inverter cuts the output before the battery reaches BMS protection. |
| 15 | Switch to grid | **25.0 V** | When discharged to this voltage, the load switches to the grid. |
| 16 | Return to battery | **27.0 V** | After recharging to this voltage, the inverter runs from the battery again. |
| 29 | Equalization charge | **OFF** | Not used for LiFePO4. |

Program numbers as in the POWGROW 3.6kW menu according to the manufacturer's manual. After entering the settings, switch the inverter off and on again.

## Which mode to choose

- **Backup during power cuts only (no panels):** 03 = Grd, 05 = PnG. The inverter runs from the grid and the battery is always full; when the power goes out it switches to the battery automatically.

minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com

- **You have solar panels and want to save:** 03 = PbG, 05 = PnG (or OPV — solar only). Solar power by day, battery at night, the grid only when the battery has dropped to 25.0 V.
- **Running on a generator:** 04 = GEN, 06 = 30 A or less, so as not to overload the generator.

## How long it runs on battery

| Load | Example | Runtime |
|---|---|---|
| 100 W | router, lights, chargers | **≈ 20.7 h** |
| 200 W | fridge + lights | **≈ 10.4 h** |
| 300 W | fridge + lights + TV | **≈ 6.9 h** |
| 500 W | fridge, laptop, pump | **≈ 4.1 h** |
| 1000 W | boiler, kettle briefly, several appliances | **≈ 2.1 h** |
| 2000 W | air conditioner, water heater, electric stove | **≈ 1.0 h** |

Approximate: 90% of battery capacity and inverter efficiency ≈90%. A fridge runs in cycles, so the real runtime is longer.

## Check after start-up

- Battery voltage on the display: ≈ 27.2–28.4 V when full, ≈ 25.0 V when discharged.
- Switch off the grid breaker: the load must keep running without interruption.
- After 10–15 min of operation, touch the terminals and cables: they must not be hot. If they heat up, a connection is loose or the cable is too thin.
- A battery below 23.2 V may have gone into BMS protection: charge it from the grid through the inverter.

**Safety.** Make all connections only with the battery, inverter and grid switched off. Do not short-circuit the battery terminals: the short-circuit current of LiFePO4 is very high. Do not install the inverter in a bathroom, outdoors in the rain or near flammable materials. If in doubt, contact an electrician.

## Shutdown and maintenance

- Switch off in reverse order: load → grid → panels → inverter → DC breaker → battery.
- Every 3 months, check that the terminals are tight and the ventilation openings are clean.
- If you do not use the kit for a long time, charge the battery to 50–70% and switch it off.

minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com