CONNECTING THE BATTERY TO THE INVERTER

EASUN SMT-6.2KW 48V + Braun Power 51.2V 628Ah 32kWh

Connecting the Braun Power 51.2V 628Ah 32kWh battery to the EASUN SMT-6.2KW 48V inverter



What is included in the system

- **Inverter EASUN SMT-6.2KW 48V**
- **Battery Braun Power 51.2V 628Ah 32kWh**

What else you will need

- Battery–inverter power cables 38 mm² (or 2×25 mm²), M8 lugs
- RS485 communication cable (RJ45), e.g. “Communication cable 1.3 m”
- DC breaker / fuse 150 A
- 63 A breaker, 6 mm² cable to the grid input
- Screwdriver, 13 mm wrench, multimeter

Wiring diagram

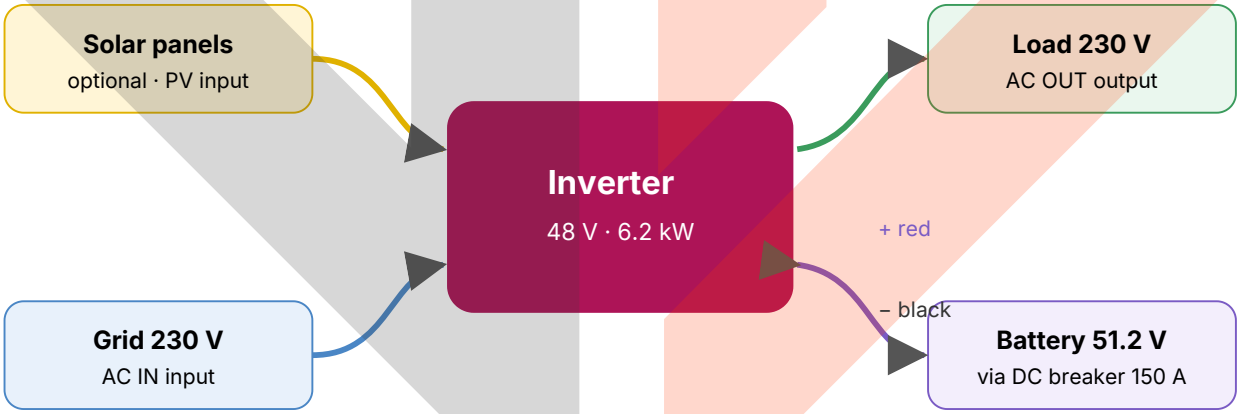

minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com

Inverter connectors: bottom and side panels

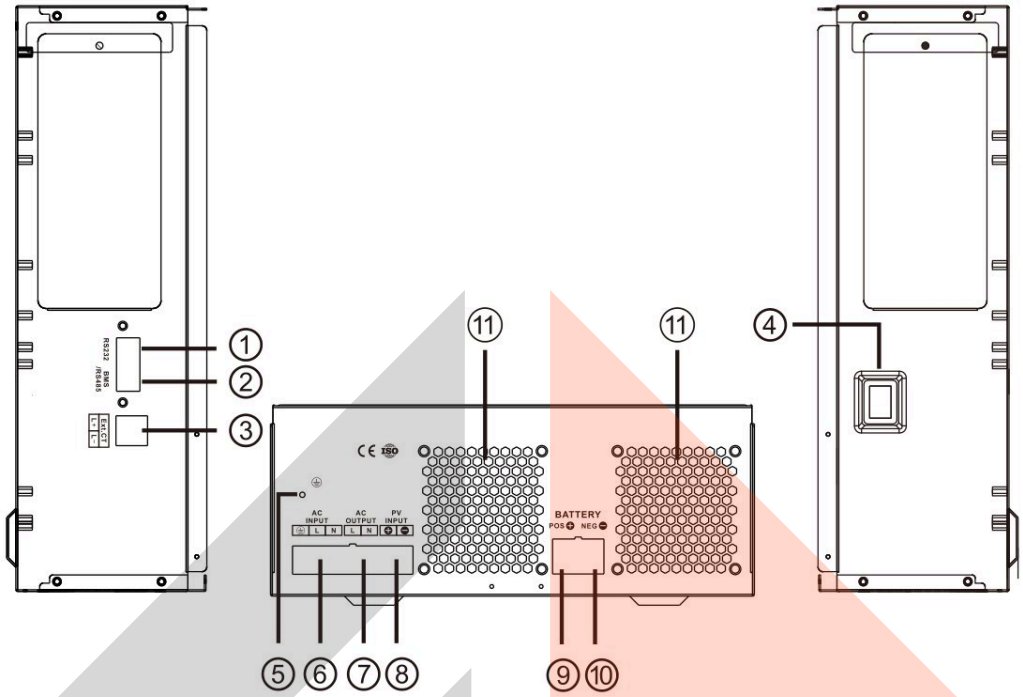

№	Connector	What it is	What connects where
1	**RS232**	RS232 communication port (side panel)	For service; not connected in normal operation
2	**BMS / RS485**	RJ45 port for communication with the lithium battery BMS	Battery communication cable; pinout: 1 — RS485- B, 2 — RS485-A, 3–8 not connected. Then program 05 = battery protocol, 37 = ON
3	**Ext. CT (L+ · L–)**	Current sensor (current transformer) input	Only for limiting export to the grid: red wire — L+, black wire — L–
4	**ON / OFF**	Power switch (side panel)	Switch on after the battery is connected and the polarity checked
5	**Grounding**	Case earthing screw	Protective PE wire (yellow-green)
6	**AC INPUT (⏚ · L · N)**	Grid or generator input	Via a 63 A breaker, 6 mm² cable, torque 1.4–1.6 N·m. PE first, then L and N
7	**AC OUTPUT (L · N)**	Output to loads (load panel)	Same cable as on the input. Do not confuse with AC INPUT
8	**PV INPUT (+ · –)**	Solar panel input	Via a separate DC breaker, 4 mm² cable. String Voc up to 500 V, operating 360–430 V
9	**BATTERY POS (+)**	Battery positive terminal	38 mm² or 2×25 mm² cable , 8.4 mm ring lug, torque 5 N·m; a fuse or DC breaker in the “+”
10	**BATTERY NEG (–)**	Battery negative terminal	Same cable; check the polarity before connecting

minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com

№	Connector	What it is	What connects where
11	**Fans**	Cooling vents	Do not cover; 20 cm of free space at the sides, 50 cm above and below

Figure and numbers from the manufacturer's manual (section "Connector panels").

Key values for this pair

56.8 V
charge voltage (26)

54.4 V
float voltage (27)

48.0 V
cut-off (29)

GrO
BMS protocol (05)

up to 120 A (inverter maximum)
max. total charge current (02)

60–100 A
grid charging (11), max. 100 A

Connection procedure

1. Mount the inverter vertically on a non-combustible wall in a dry place. Leave at least 20 cm of free space above and below for cooling.
2. Make sure everything is switched off: inverter button OFF, battery switch/button OFF, DC breaker off, 230 V grid not connected.
3. Install a **150 A** DC breaker or fuse between the battery and the inverter in the positive (red) wire.
4. Connect the power cables (cross-section at least **38 mm² (or 2×25 mm²),** M8 lugs): **red** from the battery "+" to the inverter "+ BAT", **black** from the battery "−" to "− BAT". Check the polarity twice: swapped "+" and "−" will damage the inverter.
5. Tighten the terminal bolts firmly (without stripping the thread) and fit the protective caps. A loose contact heats up and melts the terminals.
6. Connect the battery and the inverter with the **communication cable** (RJ45): **RS485** port on the battery → **BMS / RS485** port on the inverter. Do not plug the cable into the CAN or WiFi port. For protocol settings, see "Battery communication".
7. Switch on the battery (button or switch on the case, if any), then the DC breaker.
8. Switch on the inverter with the ON button. The battery voltage should appear on the display. Enter the settings from the table below.
9. Switch off the inverter and connect the 230 V grid to the **AC IN** terminals (L, N, PE) through a separate 63 A breaker.
10. Connect the load (your socket/distribution board) to the **AC OUT** terminals (L, N, PE). Never mix up AC IN and AC OUT: feeding grid power into the output damages the inverter.
11. If you have solar panels, connect them to the **PV** input last, observing polarity. The open-circuit voltage of the panels (Voc) rises in frosty weather: do not exceed the PV maximum on the inverter label.

minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com

12. Switch on the inverter and check: 230 V at the output, the battery charges from the grid (charging icon on the display), the lights stay on when the grid is off.

Battery communication: JK BMS protocol → Growatt protocol (RS485)

This battery has an RS485 port and "talks" to the inverter: the inverter sees the state of charge in percent (SOC) and takes the correct charge voltages and currents from the BMS by itself.

On the battery:

1. The battery has a JK BMS (JK BMS, version 19). Install the **JK BMS** app on your phone and connect to the battery via Bluetooth.
2. Settings password: **888888** (six eights).
3. In the BMS settings, find the **UART1 Protocol** parameter and be sure to set it to **Growatt.** Save.
4. Switch the battery off and on again to apply the protocol.

On the inverter:

1. Program **05** (battery type) = **GrO,** program **37 (**BMS communication) = **ON.**
2. Cable from the inverter **BMS / RS485** port to the battery **RS485** port.
3. Switch the inverter off and on. After 10–30 seconds the battery charge should appear on the display in **%.** If only the voltage or a communication error (warning 61 (BMS communication)) appears instead of percent, check the cable, port and protocol.
4. Once communication is established, the inverter takes the charge (26, 27) and cut-off (29) voltages from the battery. The values in the table below are a fallback if communication is lost.
5. The thresholds for switching to the grid and back (12, 13) are set in percent with BMS communication: recommended **20%** switch to grid, **80%** return to battery.

Inverter settings

Entering the menu: hold the **ENTER** (or **SET**) button for 3 seconds. Use ▲/▼ to select the program number, press ENTER, change the value, press ENTER to save. Exit: **ESC**.

№	Parameter	Value	Why
01	Output source priority	**SUb** (no panels) or **SBU** (with panels)	SUb: solar, with the grid making up any shortfall; the battery is kept full in case of a power cut. SBU: solar first, then battery, then grid.
02	Maximum charging current (total)	**up to 120 A (inverter maximum)**	Total charging from solar and grid together: up to 120 A (inverter maximum). Charging from the grid alone is limited by program 11.
03	AC input voltage range	**UPS** (from the grid) / **APL** (from a generator)	UPS: fast switchover, computers do not restart. APL: if you run on a generator.
05	Battery type / BMS protocol	**GrO**	GrO = Growatt protocol.

minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com

37	BMS communication	**ON**	Without this the inverter does not read the BMS data even with the correct type in item 05.
06	Auto restart after overload	**LTE** (enabled)	The inverter resumes operation by itself.
07	Auto restart after overheating	**TTE** (enabled)	The inverter resumes operation by itself.
09	Output frequency	**50 Hz**	Standard for Ukraine and Europe.
11	Maximum grid charging current	**60–100 A** max. 100 A	Moderate grid charging so as not to overload the wiring and the battery.
12	Back-to-grid voltage (SBU mode)	**50.0 V**	When the battery discharges to this voltage, the load switches to the grid (if available).
13	Back-to-battery voltage (SBU mode)	**54.0 V**	After recharging to this voltage, the inverter runs from the battery again.
16	Charging source priority	**SNU** (solar + grid)	The battery charges from both solar and grid. Without panels, it charges from the grid.
26	Charge voltage (Bulk / CV)	**56.8 V**	Standard for LiFePO4 16S (51.2 V).
27	Float voltage	**54.4 V**	The battery is not overcharged when it stays on the grid for a long time.
29	Cut-off voltage (Low DC cut-off)	**48.0 V**	The inverter switches off its output so as not to drain the battery to zero and trip the BMS.

Program numbers follow this inverter manufacturer's manual. After entering the settings, switch the inverter off and on again.

Which mode to choose

- **Backup during power cuts only (no panels):** 01 = SUb, 16 = SNU. The inverter runs from the grid and the battery is always full; when the power goes out it switches to the battery automatically.
- **You have solar panels and want to save:** 01 = SBU, 16 = SNU (or CSO). Solar power by day, battery at night, the grid only when the battery has dropped to 50.0 V.
- **Running on a generator:** 03 = APL, 11 = 60–100 A or less, so as not to overload the generator.

minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com

How long it runs on battery

Load	Example	Runtime
200 W	fridge + lights	**≈ 130.2 h**
300 W	fridge + lights + TV	**≈ 86.8 h**
500 W	fridge, laptop, pump	**≈ 52.1 h**
1000 W	boiler, kettle briefly, several appliances	**≈ 26.0 h**
2000 W	air conditioner, water heater, electric stove	**≈ 13.0 h**
4000 W	whole house, pump, power tools	**≈ 6.5 h**

Approximate: 90% of battery capacity and inverter efficiency ≈90%. A fridge runs in cycles, so the real runtime is longer.

Check after start-up

- Battery voltage on the display: ≈ 54.4–56.8 V when full, ≈ 50.0 V when discharged.
- Switch off the grid breaker: the load must keep running without interruption.
- After 10–15 min of operation, touch the terminals and cables: they must not be hot. If they heat up, a connection is loose or the cable is too thin.
- A battery below 46.4 V may have gone into BMS protection: charge it from the grid through the inverter.

Safety. Make all connections only with the battery, inverter and grid switched off. Do not short-circuit the battery terminals: the short-circuit current of LiFePO4 is very high. Do not install the inverter in a bathroom, outdoors in the rain or near flammable materials. If in doubt, contact an electrician.

Shutdown and maintenance

- Switch off in reverse order: load → grid → panels → inverter → DC breaker → battery.
- Every 3 months, check that the terminals are tight and the ventilation openings are clean.
- If you do not use the kit for a long time, charge the battery to 50–70% and switch it off.

minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com