CONNECTING THE BATTERY TO THE INVERTER

# JSDsolar J6500HC 6.5kW 48V + Humsienk 51.2V 100Ah 5.12kWh 3U rack

Connecting the Humsienk 51.2V 100Ah 5.12kWh 3U rack battery to the JSDsolar J6500HC 6.5kW 48V inverter



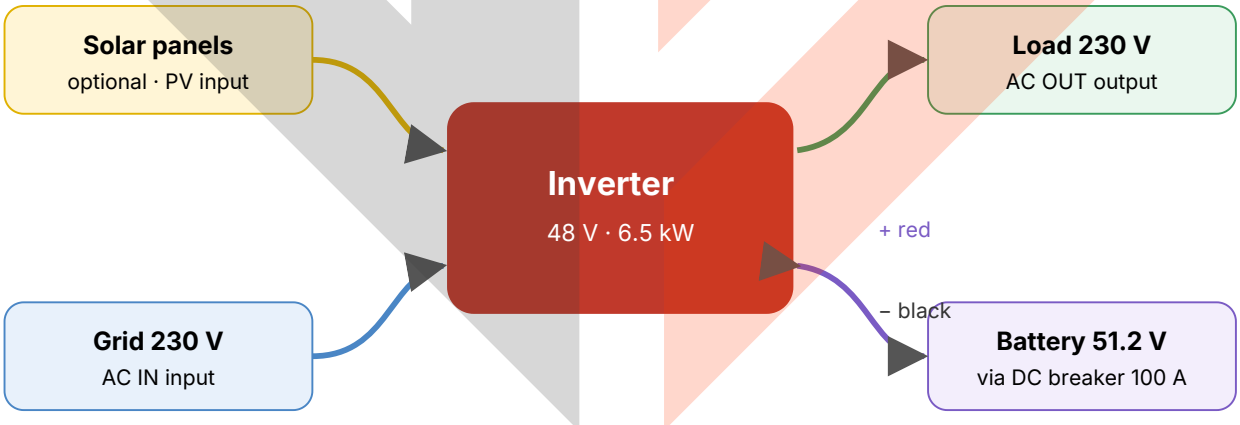

## What is included in the system

- **Inverter JSDsolar J6500HC 6.5kW 48V**
- **Battery Humsienk 51.2V 100Ah 5.12kWh 3U rack**

## What else you will need

- Battery–inverter power cables 21 mm² , M8 lugs
- DC breaker / fuse 100 A
- 63 A breaker, 6 mm² cable to the grid input
- Screwdriver, 13 mm wrench, multimeter

## Wiring diagram




minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com

## Inverter connectors: bottom panel




| № | Connector | What it is | What connects where |
|---|---|---|---|
| 1 | **AC IN** | Entry for the grid / generator cable to the AC IN terminals (L, N) | 6 mm² cable via a 63 A breaker; input 220 V, maximum 280 V |
| 2 | **OUT1** | Entry for the main output cable (terminals AC OUT1 L, N) | 4 mm² cable via a 63 A breaker to the load panel |
| 3 | **OUT2** | Entry for the second output cable (terminals AC OUT2 L, N) | 4 mm² cable via a 63 A breaker; can be switched off automatically by voltage, time or SOC (items 38–40) |
| 4 | **COM** | COM communication port (USB connector) | Purpose not described in detail in the manual |
| 5 | **BMS** | RJ45 port for communication with the lithium battery BMS | RJ45 communication cable into the battery's RS485 port; item 17 = FEL, item 44 = battery protocol; the pinout is not given in the sources |
| 6 | **BAT−** | Entry for the battery negative cable 48 V | Black 25 mm² cable |
| 7 | **BAT+** | Entry for the battery positive cable 48 V | Red 25 mm² cable via a 100 A fuse / DC breaker |
| 8 | **PV IN** | Solar panel cable entry to the PV+ / PV− terminals | 6 mm² cable; Voc up to 500 V, MPPT 60–450 V, charging from 80 V |
| 9 | **ON / OFF** | Inverter power switch | Switch on after connecting the battery and its fuse |

The earthing point is not visible in this photo; the cables pass through the entries to the terminals under the bottom cover.

minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com

## Key values for this pair

| | | |
|---|---|---|
| **56.8 V**<br>charge voltage (20) | **54.4 V**<br>float voltage (21) | **48.0 V**<br>cut-off (19) |
| **FEL**<br>battery type (17) | **50 A**<br>max. charge current (07) | **30 A**<br>grid charging (06) |

## Connection procedure

1. Mount the inverter vertically on a non-combustible wall in a dry place. Leave at least 20 cm of free space above and below for cooling.
2. Make sure everything is switched off: inverter button OFF, battery switch/button OFF, DC breaker off, 230 V grid not connected.
3. Install a **100 A** DC breaker or fuse between the battery and the inverter in the positive (red) wire.
4. Connect the power cables (cross-section at least **21 mm², M8 lugs): red from the "+"** of the battery to the inverter "+ BAT", **black** from the battery "−" to "− BAT". Check the polarity twice: swapping "+" and "−" is guaranteed to damage the inverter.
5. Tighten the terminal bolts firmly (without stripping the thread) and fit the protective caps. A loose contact heats up and melts the terminals.
6. Switch on the battery (button or switch on the case, if any), then the DC breaker.
7. Switch on the inverter with the ON button. The battery voltage should appear on the display. Enter the settings from the table below.
8. Switch off the inverter and connect the 230 V grid to the **AC IN** terminals (L, N, PE) through a separate 63 A breaker.
9. Connect the load (your socket/distribution board) to the **AC OUT** terminals (L, N, PE). Never mix up AC IN and AC OUT: feeding grid power into the output damages the inverter.
10. If you have solar panels, connect them to the **PV** input last, observing polarity. The open-circuit voltage of the panels (Voc) rises in frosty weather: do not exceed the PV maximum on the inverter label.
11. Switch on the inverter and check: 230 V at the output, the battery charges from the grid (charging icon on the display), the lights stay on when the grid is off.

**Important: power from the battery.** The battery BMS is usually rated for 100 A continuous current (the exact value is on the battery label). That is ≈ **4.6 kW** of continuous load from the battery. The inverter delivers its full 6.5 kW when grid or solar power is available. If the battery "trips" during a power cut, reduce the number of powerful appliances switched on at the same time.

minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com

## Manufacturer's data

- LiFePO4 51.2 V, 100 Ah (5.12 kWh), 100 A BMS with active balancing, built-in 125 A breaker, over 15 000 cycles at 60% depth of discharge.
- CAN, RS485, RS232 ports and two RS485 ports for linking batteries; Bluetooth 5.0. The BMS communication protocol is not stated in the materials provided by the manufacturer, so the inverter is set up **without a communication cable** (USE type, by voltage).
- Up to 16 batteries in parallel, ADS switch: automatic master/slave detection.
- 3U case, without handles 44.0 × 50.0 × 13.3 cm, 43.7 kg.

The full battery manual is a separate file on the battery's product page.

## Inverter settings

Menu access: hold the **ENTER** button for 2 seconds. Use ▲/▼ to select the program number, ENTER, change the value, ENTER to save. Exit: **ESC.**

| № | Parameter | Value | Why |
|---|---|---|---|
| 01 | Output voltage | **230V** | Standard for Ukraine and Europe. |
| 02 | Output frequency | **50Hz** | Standard for Ukraine and Europe. |
| 03 | Output source priority | **GPB** (without panels) or **PBG** (with panels) | GPB: from the grid, battery kept full for outages. PBG: solar and battery first, grid when they are not enough. |
| 04 | Input mode | **UPS** (grid) / **GEN** (generator) | UPS: fast switching for computers. GEN: power from a generator. |
| 05 | Charging source priority | **PNG** (solar + grid) | Charging from both solar and grid. |
| 06 | Grid charging current | **30 A** | Moderate grid charging, without overloading the wiring or the battery. |
| 07 | Maximum charging current (total) | **50 A** | Total solar + grid charging, safe for LiFePO4 100Ah. Do not set higher. |
| 09 | Auto restart after overload | **ON** | The inverter resumes operation by itself. |
| 10 | Auto restart after overheating | **ON** | The inverter resumes operation by itself. |
| 17 | Battery type | **FEL** (LiFePO4) | Lithium iron phosphate. AGM / FLD are for lead-acid only. |
| 44 | BMS communication | **OFF** | No communication cable to the inverter. |
| 20 | Charge voltage (CV) | **56.8 V** | Standard for LiFePO4 16S (51.2 V). |
| 21 | Float voltage | **54.4 V** | The battery is not overcharged when it stays on the grid for a long time. |

minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com

| | | | |
|---|---|---|---|
| 19 | Cut-off voltage | **48.0 V** | The inverter cuts the output before the battery reaches BMS protection. |
| 15 | Switch to grid | **50.0 V** | When discharged to this voltage, the load switches to the grid. |
| 16 | Return to battery | **54.0 V** | After recharging to this voltage, the inverter runs from the battery again. |
| 32 | Equalization charge | **OFF** | Not used for LiFePO4. |

Program numbers as in the JSDsolar J6500HC menu according to the manufacturer's manual. After entering the settings, switch the inverter off and on again.

## Which mode to choose

- **Backup during outages only (no panels):** 03 = GPB, 05 = PNG. The inverter runs from the grid, the battery is always full; during a power outage it switches to the battery automatically.
- **You have solar panels and want to save:** 03 = PBG, 05 = PNG (or OPV for solar only). Solar by day, battery at night, grid only when the battery has dropped to 50.0 V.
- **Running on a generator:** 04 = GEN, 06 = 30 A or less, so as not to overload the generator.

## How long it runs on battery

| Load | Example | Runtime |
|---|---|---|
| 100 W | router, lights, chargers | **≈ 41.5 h** |
| 200 W | fridge + lights | **≈ 20.7 h** |
| 300 W | fridge + lights + TV | **≈ 13.8 h** |
| 500 W | fridge, laptop, pump | **≈ 8.3 h** |
| 1000 W | boiler, kettle briefly, several appliances | **≈ 4.1 h** |
| 2000 W | air conditioner, water heater, electric stove | **≈ 2.1 h** |
| 4000 W | whole house, pump, power tools | **≈ 1.0 h** |

Approximate: 90% of battery capacity and inverter efficiency ≈90%. A fridge runs in cycles, so the real runtime is longer.

## Check after start-up

- Battery voltage on the display: ≈ 54.4–56.8 V when full, ≈ 50.0 V when discharged.
- Switch off the grid breaker: the load must keep running without interruption.
- After 10–15 min of operation, touch the terminals and cables: they must not be hot. If they heat up, a connection is loose or the cable is too thin.
- A battery below 46.4 V may have gone into BMS protection: charge it from the grid through the inverter.

minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com

**Safety.** Make all connections only with the battery, inverter and grid switched off. Do not short-circuit the battery terminals: the short-circuit current of LiFePO4 is very high. Do not install the inverter in a bathroom, outdoors in the rain or near flammable materials. If in doubt, contact an electrician.

## Shutdown and maintenance

- Switch off in reverse order: load → grid → panels → inverter → DC breaker → battery.

- Every 3 months, check that the terminals are tight and the ventilation openings are clean.
- If you do not use the kit for a long time, charge the battery to 50–70% and switch it off.

minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com