CONNECTION AND SETUP GUIDE

Kit Aninerel ANL-4200T-24L-W-PRO 4.2kW 24V + Cyccle Volt 25.6V 100Ah 2560Wh



Inverter Aninerel ANL-4200T-24L-W-PRO 4.2kW 24V + battery Cyccle Volt 25.6V 100Ah 2560Wh


Kit contents

- **Inverter Aninerel ANL-4200T-24L-W-PRO 4.2kW 24V**
- **Battery Cyccle Volt 25.6V 100Ah 2560Wh**

What else you will need

- Battery–inverter power cables 35 mm², M8 lugs
- DC breaker / fuse 200 A
- 50 A breaker, 6 mm² cable to the grid input
- Screwdriver, 13 mm wrench, multimeter


Wiring diagram

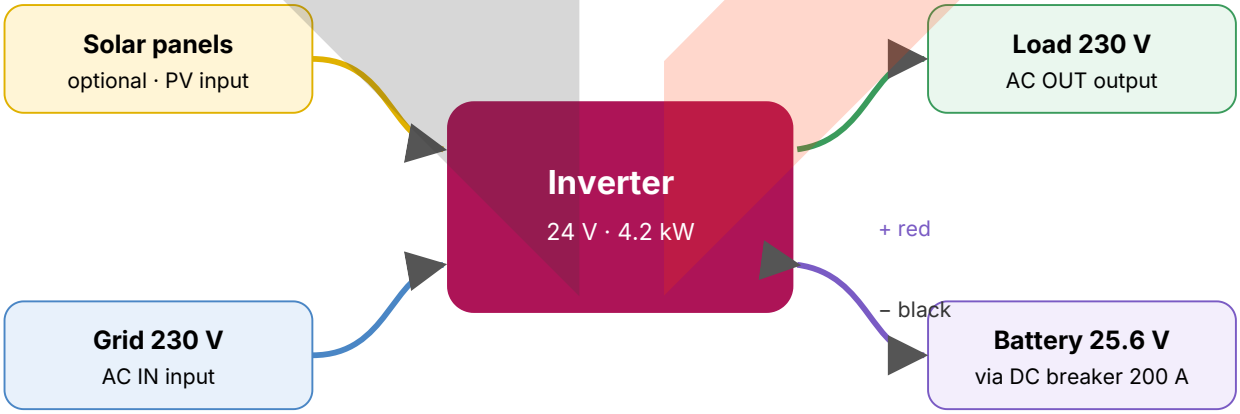


minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com

Inverter connectors: bottom panel and side wall

вигляд знизу

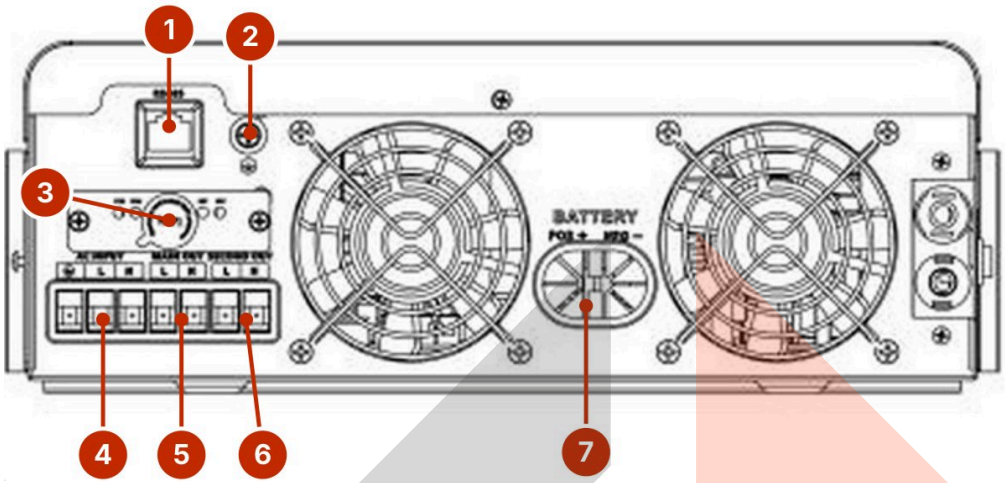

бокова стінка

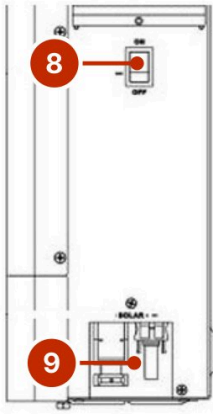

№	Connector	What it is	What connects where
1	**RS485 (BMS)**	RJ45 port for RS485 communication with the lithium battery BMS.	Battery communication cable, “pin to pin”: pin 1 — RS485-B, 2 — RS485-A, 7 — RS485-A, 8 — RS485-B. Then select LI2 or LI4 in program 05.
2	**Grounding**	Case earthing screw.	Protective PE wire (yellow-green). The inverter must be connected to a permanent earth.
3	**Wi-Fi antenna port**	Built-in Wi-Fi Plug Pro module for monitoring via the app.	Screw on the Wi-Fi antenna from the kit (see the Wi-Fi page).
4	**AC INPUT (⏚ · L · N)**	Grid or generator input.	Via a separate 50 A breaker. 6 mm² cable. PE first, then L (brown/black) and N (blue).
5	**MAIN OUT (L · N)**	Main output (OP1).	Panel for essential loads. 6 mm² cable. Disconnection from the battery: program 31.
6	**SECOND OUT (L · N)**	Second output (OP2).	Less important loads. Switches off before the main output (program 29); enabled by program 43; overload warning threshold: program 47.
7	**BATTERY (POS + · NEG –)**	Battery terminals 24 V (cable entry in the middle).	50 mm² cable with lugs, 4– 6 N·m; separate DC protection. There is no reverse polarity protection, so check with a tester.
8	**ON / OFF**	Power switch (on the side wall in the manual’s figure).	Switch on after all cables are connected and the battery is attached.
9	**PV (SOLAR + · –)**	Solar panel input (on the side wall), sockets for PV connectors; 2 connectors included.	Via a separate DC breaker. 6 mm² cable. Open-circuit voltage no more than 500 V.

minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com

Figure from the manufacturer's manual (p. 2, "Product overview"); the two round elements on the right of the bottom panel are not described in the manual.

Key values for this kit

28.4 V charge voltage (26)	**27.2 V** float voltage (27)	**24.0 V** cut-off (31)
USE battery type (05)	**50 A** max. charge current (02)	**30 A** grid charging (11)

Connection procedure

1. Mount the inverter vertically on a non-combustible wall in a dry place. Leave at least 20 cm of free space above and below for cooling.
2. Make sure everything is switched off: inverter button OFF, battery switch/button OFF, DC breaker off, 230 V grid not connected.
3. Install a **200 A** DC breaker or fuse between the battery and the inverter in the positive (red) wire.
4. Connect the power cables (cross-section at least **35 mm²**, M8 lugs): **red** from the battery "+" to the inverter "+ BAT", **black** from the battery "−" to "− BAT". Check the polarity twice: swapping "+" and "−" is guaranteed to damage the inverter.
5. Tighten the terminal bolts firmly (without stripping the thread) and fit the protective caps. A loose contact heats up and melts the terminals.
6. Switch on the battery (button or switch on the case, if any), then the DC breaker.
7. Switch on the inverter with the ON button. The battery voltage should appear on the display. Enter the settings from the table below.
8. Switch off the inverter and connect the 230 V grid to the **AC IN** terminals (L, N, PE) through a separate 50 A breaker.
9. Connect the load (your socket/distribution board) to the **AC OUT** terminals (L, N, PE). Never mix up AC IN and AC OUT: feeding grid power into the output damages the inverter.
10. If you have solar panels, connect them to the **PV** input last, observing polarity. The open-circuit voltage of the panels (Voc) rises in frosty weather: do not exceed the PV maximum on the inverter label.
11. Switch on the inverter and check: 230 V at the output, the battery charges from the grid (charging icon on the display), the lights stay on when the grid is off.

Important: power from the battery. The battery BMS is usually rated for 100 A continuous current (the exact value is on the battery label). That is ≈ **2.3 kW** of continuous load from the battery. The inverter delivers its full 4.2 kW when grid or solar power is available. If the battery "trips" during a power cut, reduce the number of powerful appliances switched on at the same time.

minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com

Inverter settings

Entering the menu: hold the **ENTER** (or **SET**) button for 3 seconds. Use ▲/▼ to select the program number, press ENTER, change the value, press ENTER to save. Exit: **ESC**.

№	Parameter	Value	Why
01	Output source priority	**UTI** (no panels) or **SBU** (with panels)	UTI: we run from the grid and keep the battery full in case of a power cut. SBU: solar first, then battery, then grid.
02	Maximum charging current (total)	**50 A**	Safe for LiFePO4 100Ah (≈0.5C). Do not set higher: it shortens the battery's life.
03	AC input voltage range	**UPS** (from the grid) / **APL** (from a generator)	UPS: fast switchover, computers do not restart. APL: if you run on a generator.
05	Battery type	**USE** (user-defined)	The battery has no communication with the inverter: the charge and cut-off voltages are set manually below. Do not select AGM/FLD: those are for lead-acid batteries.
06	Auto restart after overload	**LTE** (enabled)	The inverter resumes operation by itself.
07	Auto restart after overheating	**TTE** (enabled)	The inverter resumes operation by itself.
09	Output frequency	**50 Hz**	Standard for Ukraine and Europe.
11	Maximum grid charging current	**30 A**	Moderate grid charging so as not to overload the wiring and the battery.
12	Back-to-grid voltage (SBU mode)	**25.0 V**	When the battery discharges to this voltage, the load switches to the grid (if available).
13	Back-to-battery voltage (SBU mode)	**27.0 V**	After recharging to this voltage, the inverter runs from the battery again.
16	Charging source priority	**SNU** (solar + grid)	The battery charges from both solar and grid. Without panels, it charges from the grid.
26	Charge voltage (Bulk / CV)	**28.4 V**	Standard for LiFePO4 8S (25.6 V).
27	Float voltage	**27.2 V**	The battery is not overcharged when it stays on the grid for a long time.
31	Main output cut-off (OP1)	**24.0 V**	The inverter switches off its output so as not to drain the battery to zero and trip the BMS.

Program numbers follow this inverter manufacturer's manual. After entering the settings, switch the inverter off and on again.

minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com

Which mode to choose

- **Backup during power cuts only (no panels):** 01 = UTI, 16 = SNU. The inverter runs from the grid and the battery is always full; when the power goes out it switches to the battery automatically.
- **You have solar panels and want to save:** 01 = SBU, 16 = SNU (or CSO). Solar power by day, battery at night, the grid only when the battery has dropped to 25.0 V.
- **Running on a generator:** 03 = APL, 11 = 30 A or less, so as not to overload the generator.

How long it runs on battery

Load	Example	Runtime
100 W	router, lights, chargers	**≈ 20.7 h**
200 W	fridge + lights	**≈ 10.4 h**
300 W	fridge + lights + TV	**≈ 6.9 h**
500 W	fridge, laptop, pump	**≈ 4.1 h**
1000 W	boiler, kettle briefly, several appliances	**≈ 2.1 h**
2000 W	air conditioner, water heater, electric stove	**≈ 1.0 h**

Approximate: 90% of battery capacity and inverter efficiency ≈90%. A fridge runs in cycles, so the real runtime is longer.

Check after start-up

- Battery voltage on the display: ≈ 27.2–28.4 V when full, ≈ 25.0 V when discharged.
- Switch off the grid breaker: the load must keep running without interruption.
- After 10–15 min of operation, touch the terminals and cables: they must not be hot. If they heat up, a connection is loose or the cable is too thin.
- A battery below 23.2 V may have gone into BMS protection: charge it from the grid through the inverter.

Safety. Make all connections only with the battery, inverter and grid switched off. Do not short-circuit the battery terminals: the short-circuit current of LiFePO4 is very high. Do not install the inverter in a bathroom, outdoors in the rain or near flammable materials. If in doubt, contact an electrician.

Shutdown and maintenance

- Switch off in reverse order: load → grid → panels → inverter → DC breaker → battery.
- Every 3 months, check that the terminals are tight and the ventilation openings are clean.
- If you do not use the kit for a long time, charge the battery to 50–70% and switch it off.

minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com

Bluetooth: app and connection

The battery has built-in Bluetooth. On the phone you can see the charge level, voltage, current, temperature and BMS protection status. The app is called **XiaoXiangElectric** (icon: a white elephant on a light blue background). Both QR codes are on the white sticker on the side of the battery. Bluetooth works only with a phone: the battery does not exchange data with the inverter, so the battery type in the inverter remains **USE.**

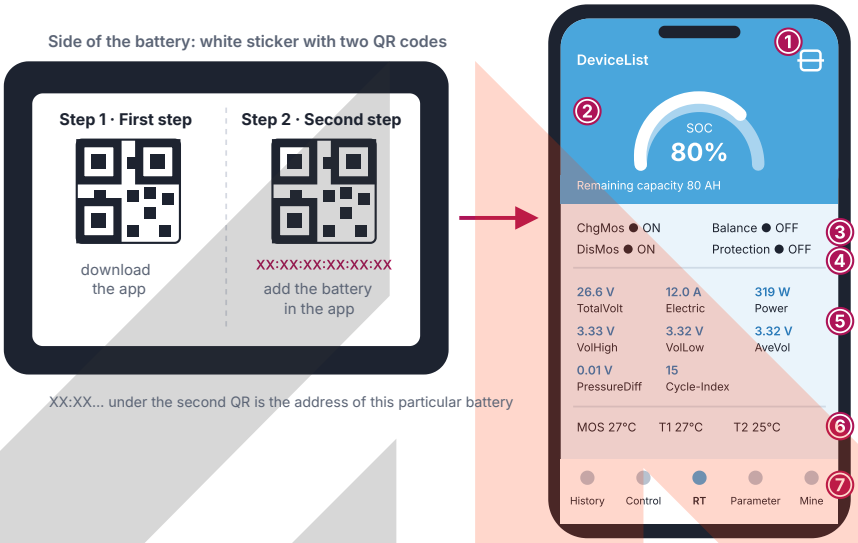


Figure for reference: the numbers on the screen are an example.

1. Scan the **first QR code (“** First step”) on the sticker with your phone camera. The XiaoXiangElectric app page will open (on iPhone, in the App Store). Install it. Install exactly this app, not ones with similar names.
2. Turn on Bluetooth on the phone. On first launch, allow the app access to Bluetooth (on Android also to “Nearby devices” or location: without this the phone cannot see the battery).
3. Go up to the battery with the phone, within a few metres.
4. On the app’s main screen, tap the scan icon in the top right corner ① and point the camera at the **second QR code** (“Second step”). The app will add this battery and connect to it.
5. After connecting, the line “Current Connected” with the battery name appears at the top, and its data below (tab **RT).**
6. If there are several batteries, add each one with its own second QR code. The battery address is printed under it (six pairs of characters separated by colons): it makes the batteries easy to tell apart in the list.

What the app shows

② “SOC” — charge level in percent; “Remaining capacity” — how many amp-hours are left. ③ “ChgMos” and “DisMos” — charge and discharge allowed (ON). OFF means the BMS has switched off charging or discharging.

④ “Balance” ON — the BMS is balancing the cells right now. “Protection” ON — a BMS protection has tripped (overcharge, deep discharge, high current or temperature).

minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com

⑤ “TotalVolt” — battery voltage; “Electric” — current; “Power” — power; “VolHigh”, “VolLow”, “AveVol” — highest, lowest and average cell voltage; “PressureDiff” — voltage difference between cells; “Cycle-Index” — number of cycles.

⑥ “MOS”, “T1”, “T2” — temperature of the BMS power switches and of the sensors inside the battery. ⑦ Tabs: **History —** history, **Control —** control, **RT —** real-time data, **Parameter —** BMS parameters, **Mine —** app settings.

In the **Control** tab, the “Charge Switch” turns battery charging on and off: keep it **ON,** otherwise the inverter will not charge the battery. “ClearWarning” resets warnings. Do not change “AutoBalance”, “Current calibration”, “Reset capacity” or the **Parameter** tab unless necessary: they hold the factory BMS settings.

If Bluetooth does not connect

- Check that Bluetooth is on on the phone and the app has permissions (phone settings → apps → XiaoXiangElectric).
- Move closer to the battery. A metal cabinet and walls weaken the signal.
- The battery may already be connected to another phone: close the app on it and try again.

- If the battery is deeply discharged and has gone into protection, Bluetooth may not respond. Charge it from the grid via the inverter and try again.

The app only shows the battery status. It does not replace the inverter settings in this guide.

minertech.org · MinerTech® trademark · © 2017–2026, all rights reserved
+38 093 293 93 93 · +38 099 054 40 38 · Specialist Pavlo Leonidovych · strooks@gmail.com